

Automatic pocket folding machines

FA 24/...AS 24

FA 36/...AS 36

FA 45/...AS 45

FA 36/...SAF 36

FA 45/...SAF 45



A perfect modular system.

First class in performance and technology.

The new high-capacity automatic folding machine for sheet formats 36×65 and 46×65 cm, easy operation - rapid conversion times

GUK HOCHLEISTUNGSFALZAUTOMATEN

Automatic pocket folding

FA 36/4-4K-SAF 36 FA 45/4-4K-SAF 45

Automatic suction feeder where the sheets are taken from the bottom of the pile.

With synchronous drive system. Digital, variable sheet distance control.

New alignment table made of Nirosta.

Combined folding pockets with integrated deflectors and vernier adjusters.

New large knife shafts of Ø 40. Roller pressure adjustment by means of callipers.

Noiseless belt drive.

Combined folding pockets with exchangeable plastic rings.

Available with 2, 4, 6 or 8 folding pockets/station.



FA 36/4-SAF 36 FA 45/4-SAF 45

Folder with 4 folding pockets, chute delivery and suction feeder. Further models are available with 2, 6 or 8 folding pockets.



machines FA 36 and FA 45



FA 36/4-4K-AS 36 FA 45/4-4K-AS 45

Folder with 2, 4, 6 or 8 folding pockets/station, to be combined in line or at right angle with friction feeder.




New combined folding pockets with adjusting vernier scales and integrated sheet deflectors.

Only adjust the stop to "0". There is no need to remove the pockets! Made of chromium-plated steel, therefore no static or wear!

Noiseless belt drive, which is situated at the outside.

Combined folding rollers, in needle bearings with exchangeable plastic rings.




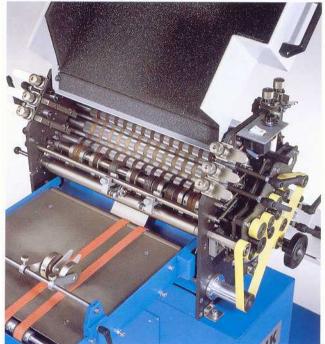

Fold roller pressure adjustment via means of callipers

Additional fine adjustment by vernier.

Simple, fast and safe.

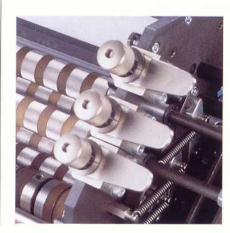

Accessory: Mobile chute delivery

With variable drive.

Simple and fast adjustment of the table mechanism height. With mounted gas strut.






SAF 36 SAF 45

Suction feeder where the sheets are taken from the bottom of the pile.

With alignment table in antistatic-design.

Digital sheet distance control. With synchronous drive or with independent drive for machines of other suppliers.



Folder with 2 or 4 folding pockets, chute delivery and friction feeder.






FA 24/4 STATION II FA 36/4 STATION II FA 45/4 STATION II

Folding machine with 4 folding pockets.

New roller table with closer distance in-between the rollers. New alignment ruler - therefore the sheets are controlled with ease. Further models are also available with 2, 6 or 8 folding pockets.

FA 36/4-4K - SAF 36

FA 45/4-4K - SAF 45

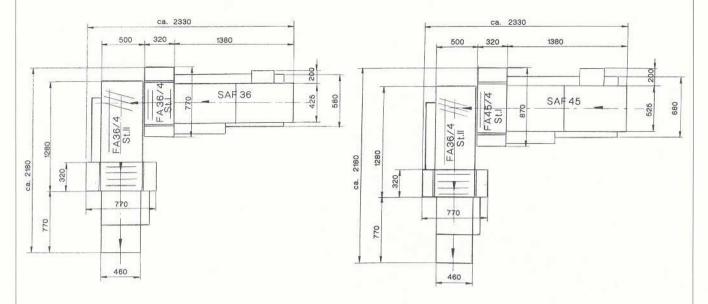

Technical Data

	I	FA 36/4-4K	FA 45/4-4K	FA 24/AS 24
Max. format:	for AS	36 x 50 cm	46 x 50 cm	24 x 30 cm
	for SAF	36 x 65 cm	46 x 65 cm	
Min. format:	for AS	7 x 9 cm	7 x 9 cm	7 x 9 cm
	for SAF	8.5 x 10 cm	8.5 x 10 cm	
	Extraordinary	6 x 10 cm	6 x 10 cm	
Smallest folding length: 18 mm		18 mm	18 mm	
Output:	up to 30.000 sheets/hour		up to 30.000 sheets/hour	up to 30.000 sheets/hour
Speed:	150 m/min.		150 m/min.	
Power	for AS	0.5 kW	0.5 kW	0.5 kW
requirement:	for FA 36/4-SAF 36 2.0 kW		2,0 kW	
	for FA 36/4-4K-SAF 2.8 kW		2.8 kW	

Accessories

- · Batch counter
- Kicker
- · Continuous counter
- · Edge cutting device
- Strip cutting device
- · Crimping device
- · Gate folding pocket

- Mobile knife folding mechanism ZK 500
- Mobile knife folding mechanism ZK 500/4-P
- Mobile knife folding mechanism EK 300
- · Mobile chute delivery
- · Glueing device
- Vertical stacker KS 310
- · Ejector for vertical stacker
- Sheet pressing unit

Our range:

Folding machines for the pharmaceutical and general industries.

Pre cut and reel fed leaflet folders with sheet widths of 21-30-35-36-43-45-50-54-74 cm available in 80 different models. We also manufacture special machinery according to individual customer requirements and specifications, we have top class design and Engineering team dedicated to this. Please contact us and we will solve all your folding problems.



GUK-Falzmaschinen

Griesser & Kunzmann GmbH & Co. KG

D-78669 Wellendingen · Bahnhofstraße 4 Telefon (07426) 703-1 · Telefax (07426) 703-333 info@GUK-Falzmaschinen.de · www.GUK-Falzmaschinen.de